

۲

Address for GB IMETEC UK ltd 7 Verity Court, Middlewich, Cheshire, CW10 0GW, UK. Address for Ireland/NI Tenacta Group S.p.A. Via Piemonte 5/11 24052 Azzano S. P. (BG) ITALY.

۲

۲


MI004264 160323



#### **ILLUSTRATIVE GUIDE**

[**A**]

۲

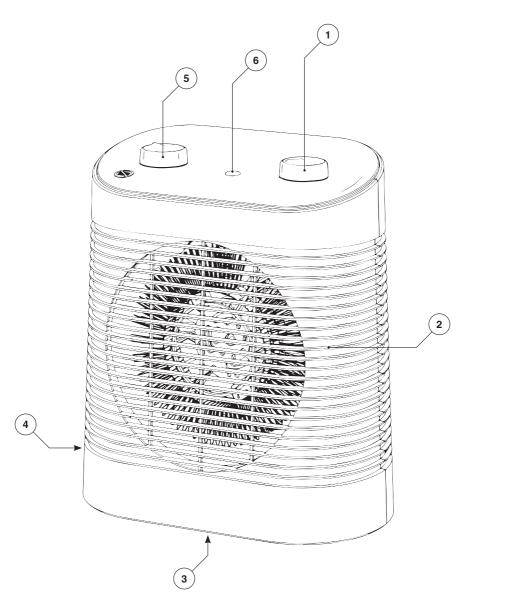


۲

I

۲

### **TECHNICAL DATA (3)**

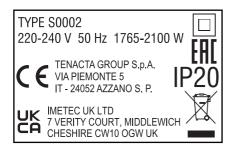

۲

۲

۲

## INTRODUCTION

Dear customer, thank you for choosing our product. We feel certain you will appreciate its quality and reliability as it was designed and manufactured with customer satisfaction in EN mind. These instructions for use are compliant with the European Standard EN 82079.

( )



( )



WARNING! Instructions and warnings for safe use.

Before using this appliance, carefully read the instructions for use and in particular the safety notes and warnings, which must be complied with. Keep this manual together with its illustrative guide for future consultation. Should you transfer the appliance to another user, make sure you hand over this documentation as well.

- ① NOTE: should any part of this manual be difficult to understand or any doubt arise, contact the company at the address indicated on the last page before using the appliance.
- (i) NOTE: persons with impaired vision may consult these instructions for use in digital format at the website www.dreamlanduk.co.uk

## INDEX

| Introductionpage 1Safety notespage 1Symbolspage 4Description of the appliancepage 4Preparationpage 4Usepage 4Maintenance and storagepage 5 | Troubleshootingpage 6<br>Assistance and warrantypage 6<br>Illustrative guideI |
|--|---|
| Maintenance and storage page 5   |   |

# SAFETY NOTES

After unpacking, make sure the appliance is intact, complete with all its parts as shown in the illustrative guide and with no sign of damage. If in any doubt, do not use the appliance and contact an authorised service centre.



EN

( )

CAUTION! Remove any communication material such as labels, tags etc. from the appliance before use.



WARNING! Risk of suffocation.

Children shall not play with the packaging. Keep the plastic bag out of the reach of children.

- This appliance must be used only for the purpose for which it was designed, namely as a fan heater for home use. Any other use is considered not compliant with the intended use and therefore dangerous.
- Before connecting the appliance to the mains supply, make sure that the voltage and frequency indicated on the technical data of the appliance correspond to those of the mains supply. The rating is on the appliance or on the power supply unit, if any (see illustrative guide).
- Children of less than 3 years should be kept away from the appliance unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.



CAUTION! Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- $\bigcirc$  DO NOT use the appliance with wet hands, damp feet or barefoot.
- O DO NOT pull the supply cord or the appliance itself to remove the plug from the socket.

۲

2

( )

- $\bigcirc$  DO NOT pull or lift the appliance by the supply cord.
- OD NOT expose the appliance to humidity, to the effects of weather (rain, sun, etc.) or to extreme temperatures.

 $(\mathbf{0})$ 

- Always disconnect the appliance from the mains supply before cleaning or performing maintenance and when the appliance is not in use.
- If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Contact an authorised technical service centre for any repairs.
- If the supply cord is damaged it must be replaced by an authorised technical service centre, so as to prevent all risks.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA (ideal 10 mA) is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

- O DO NOT use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- O DO NOT use this appliance near a washbasin or a sink filled with water. During use the appliance must be placed in such a way that it cannot fall in the washbasin or the sink.
- This appliance must not be located immediately below a socket outlet.
- O DO NOT leave this appliance in contact with or near materials and surfaces that are easily flammable or can be damaged by heat.
- Use this heater on a horizontal and stable surface, or fix to the wall, as applicable.
- $\bigcirc$  DO NOT use this heater if it has been dropped.
- $\bigcirc$  DO NOT use this heater if there are visible signs of damage.



WARNING! In order to avoid overheating, do not cover the heater.

۲

WARNING! To reduce the risk of fire, keep textiles, curtains, or any other flammable material at a minimum distance of 1 m from the air outlet.

EN

( )

3



( )

WARNING! DO NOT use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

- See the external packaging for the characteristics of the appliance.
- OD NOT use extension cords or adaptors.

# CONNECTION TO THE MAINS SUPPLY

Please check that the voltage stated on the appliance corresponds to the voltage of your power supply. This appliance is fitted with a 10A fuse plug complying with BS 1363 standard.

| SYMBOLS     |               |     |                                      |  |  |  |  |
|-------------|---------------|-----|--------------------------------------|--|--|--|--|
| $\triangle$ | Warning       | ₹¢  | Cool air                             |  |  |  |  |
| $\bigcirc$  | Prohibited    |     | Warm air                             |  |  |  |  |
|             | Do not cover  | II  | Hot air                              |  |  |  |  |
| $\bigcirc$  | Appliance OFF | III | Rapid heating                        |  |  |  |  |
| Í           | Note          | *   | Minimum temperature/ Anti-<br>freeze |  |  |  |  |
|             |               | MAX | Max temperature                      |  |  |  |  |

# **DESCRIPTION OF THE APPLIANCE**

Refer to Figure [A] in the Illustrative Guide to check the contents of the package.

- 1. Thermostat
- 2. Product body
- 3. Technical data

- 4. Cable with plug
- 5. Power selector
- 6. ON LED

# PREPARATION

- Unpack the product.
- Check that it is intact and not damaged.
- Connect the product to the domestic mains.

### USE

• For fan operation, move the power switch (5) to the cool air position and adjust the ambient thermostat (1) to the maximum temperature.

۲

4

( )

- For gradual heating, move the power switch (5) to the Warm air position I or the Hot air position II and adjust the ambient thermostat (1) to the required temperature.
- For quick heating, move the power switch (5) to the rapid heating position III and set the ambient thermostat (1) on the required temperature.
- To switch the appliance off, turn the power switch (5) to off.

#### EN

( )

### Minimum temperature/ Anti-freeze function

This function assures maintaining the room temperature at around  $+5^{\circ}$ C. The fan heater turns on automatically as soon as the temperature falls below this value.

- Adjust the room thermostat (1) to the minimum temperature.
- Turn the power switch (5) to the warm air I or hot air II position to gradually achieve a temperature of +5°C.
- Turn the power switch (5) to the Rapid heat position III to quickly achieve a temperature of +5°C

# **MAINTENANCE AND STORAGE**



WARNING! Always disconnect the appliance from the mains before cleaning or performing maintenance.

The fan heater may be cleaned using a soft, slightly damp cloth. Dry well after cleaning.



( )

WARNING! Risk of fire. Wait for the appliance to cool completely before storing it.

Keep the fan heater in a cool, dry place, out of reach of children.

(i) NOTE: When you put the fan heater away, make sure it is well-protected from dust.

# TROUBLESHOOTING

In the event that one the following problem should occur, adopt the proposed solution.

| Problem                              | Solution  |
|--------------------------------------|---|
| The product emanates a "burnt" smell | Check for the presence of any dust residues and proceed with cleaning as indicated in the MAINTENANCE AND STORAGE chapter |
| The product does not work            | Make sure that the thermostat (5) is not positioned on the minimum temperature / antifreeze position (where present)      |

### DISPOSAL

EN <sub>₹</sub>

( )

The packaging of the appliance is made of recyclable materials. Dispose of the packaging in accordance with the environmental protection regulations.

Pursuant to Waste Electrical and Electronic Equipment (WEEE) Regulations (2013) (for EU: Directive 2012/19/EU), the crossed bin symbol on the appliance or its packaging indicates that the appliance must be disposed of separately from other waste at the end of its useful life. The user must therefore take the appliance to an appropriate recycling centre for electrical and electronic equipment. Alternatively, instead of handling the disposal, the user can hand over the appliance to the retailer when a new, equivalent one is purchased. The user can hand over electronic products measuring less than 25 cm to retailers of electronic products having a sales area of at least 400 m<sup>2</sup> free of charge and with no obligation to buy. Proper waste sorting prior to sending the equipment no longer used for recycling, processing and disposal in a manner that respects the environment contributes towards avoiding negative impacts on the environment and on health and promotes the reuse and/or recycling of the equipment's material.

### GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase against material, mechanical and electrical defects. The guarantee is binding if it is accompanied by a valid receipt of payment. This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions provided that is not connected to an unsuitable electricity supply, dismantled, interfered with in any way damaged, through misuse, fair wear and tear. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

PLEASE NOTE, THE COST OF A SAFETY INSPECTION IS NOT COVERED BY THIS GUARANTEE. A CHARGE WILL BE MADE IN RESPECT OF ANY PRODUCT RETURNED UNDER THIS GUARANTEE, WHERE NO FAULT IS FOUND.

This guarantee is offered as an extra benefit and does not affect your statutory rights as a consumer. This guarantee does not confer any rights other than those expressly set out above and in particular we shall not be liable for any indirect or consequential loss or damage. Nothing in this guarantee or the instructions relating to the product excludes, restricts or otherwise affects your statutory rights. In line with our policy of continuous development, we reserve the right to change this product, packaging and documentation without notice. If a defect appears and after checking that the blanket is being used properly in accordance with the instructions, return it with a valid proof of purchase, as soon as possible to the manufacturer's Service Centre. This guarantee is valid in the UK only.

( )

### SERVICE CENTRE

PO Box 166 – Middlewich – Cheshire – CW10 0ZU - Tel: 0333 0050305 E-mail: customerservice@imetec.co.uk www.dreamlanduk.co.uk

This is without prejudice to any contractual warranty claims against the seller.

### Methods of support

۲

Appliance repairs must be carried out by an authorised Service Centre. If the faulty appliance is under warranty, it must be sent to the Service Centre together with a fiscal document that can confirm the date of sale or delivery.

۲

EN

### INFORMATION REQUIREMENTS FOR ELECTRIC LOCAL SPACE HEATERS

| IVI | lodel identifier(s): Typ<br>Item   | Symbol  | Value | Unit | Item  | Unit     |
|-----|------------------------------------|---|-------|------|---|----------|
|     | item                               | Symbol  | value | Unit | -   |          |
| Н   | Heat output                        |   |       |      | Type of heat input, for electric storage local space heaters only (select one)  |          |
| N   | ominal heat output                 | P <sub>nom</sub>  | 1,93  | kW   | manual heat charge control, with integrated thermostat                          | no       |
|     | linimum heat<br>utput (indicative) | $P_{min}$   | 0,7   | kW   | manual heat charge control with room and/or<br>outdoor temperature feedback     | no       |
|     | laximum conti-<br>uous heat output | $P_{_{\max,c}}$   | 1,93  | kW   | electronic heat charge control with room and/or<br>outdoor temperature feedback | no       |
| Α   | uxiliary electricity o             | xiliary electricity consumption   |       |      | fan assisted heat output  | no       |
|     | t nominal heat<br>utput            | el <sub>max</sub>   | 1,93  | kW   | Type of heat output/room temperature contro one)                                | l (seleo |
|     | t minimum heat<br>utput            | $el_{min}$  | 0,7   | kW   | single stage heat output and no room tempera-<br>ture control                   | no       |
| In  | standby mode                       | el <sub>sb</sub>  | n.a   | kW   | Two or more manual stages, no room tempera-<br>ture control                     | no       |
|     |                                    |   |       |      | with mechanic thermostat room temperature control                               | yes      |
|     |                                    |   |       |      | with electronic room temperature control  | no       |
|     |                                    |   |       |      | electronic room temperature control plus day timer                              | no       |
|     |                                    |   |       |      | electronic room temperature control plus week timer                             | no       |
|     |                                    |   |       |      | Other control options (multiple selections pos                                  | ssible)  |
|     |                                    |   |       |      | room temperature control, with presence detection                               | no       |
|     |                                    |   |       |      | room temperature control, with open window detection                            | no       |
|     |                                    |   |       |      | with distance control option  | no       |
|     |                                    |   |       |      | with adaptive start control   | no       |
|     |                                    |   |       |      | with working time limitation  | no       |
|     |                                    |   |       |      | with black bulb sensor  | no       |
| С   | contact details                    | GB IMETEC UK Itd 7 Verity Court, Middlewich, Cheshire, CW10 0GW, UK.<br>Ireland/NI Tenacta Group S.p.A. Via Piemonte 5/11 24052 Azzano S. P. (BG)<br>ITALY. |       |      |   |          |