

DREAMLAND


PURE COMFORT  
BAMBOO FIBRE  
MATTRESS WARMER

TYPE R9064  
R9065  
R9066  
R9067  
R9068



Instructions for use

ILLUSTRATIVE GUIDE

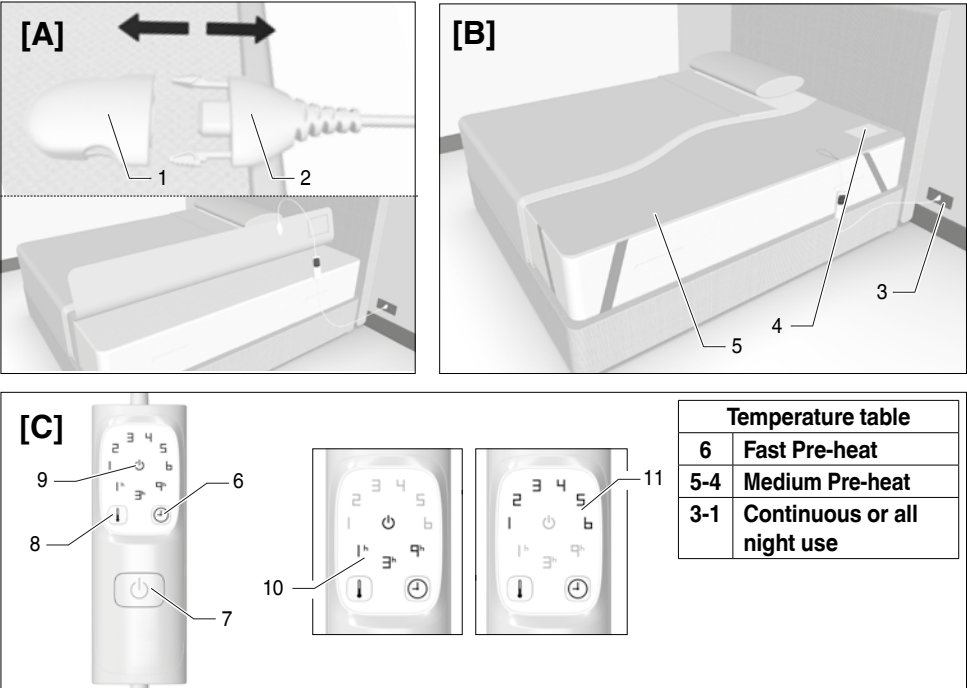

DESCRIPTION OF THE APPLIANCE

1. Underblanket connector

2. Control connector

3. Mains socket

4. Rating Label

5. Underblanket

6. Timer
7. ON/OFF button

8. Temperature selector

9. Stand-by LED

10. Auto Shut Off Timer LED

11. Temperature LED

TECHNICAL DATA














<b>TYPE R9064</b> 220-240 V 50/60 Hz 150 W	<b>TYPE R9065</b> 220-240 V 50/60 Hz 150 W
<b>TYPE R9066</b> 220-240 V 50/60 Hz 2x150 W	<b>TYPE R9067</b> 220-240 V 50/60 Hz 2x150 W
<b>TYPE R9068</b> 220-240 V 50/60 Hz 2x150W	

*Dear Customer, thank you for choosing our product. We feel certain you will appreciate its quality and reliability as it was designed and manufactured with customer satisfaction in mind. These instructions for use are compliant with the European Standard EN 82079.*

## INDEX

<b>Illustrative guide</b>	<b>page 1</b>
<b>Description of the appliance</b>	<b>page 1</b>
<b>Technical data</b>	<b>page 1</b>
<b>Symbols</b>	<b>page 2</b>
<b>Important instructions</b>	<b>page 3</b>
<b>Use</b>	<b>page 5</b>
<b>Cleaning and maintenance</b>	<b>page 7</b>
<b>Storing the underblanket</b>	<b>page 8</b>
<b>Troubleshooting</b>	<b>page 9</b>
<b>Disposal</b>	<b>page 9</b>
<b>Guarantee</b>	<b>page 10</b>

## SYMBOLS

 <i>Class II appliance</i>	 <i>Prohibition</i>
 <i>Read the instructions</i>	 <i>Information</i>
 <i>Caution/Warning/Danger</i>	 <i>NOT to be used by very young children (0-3 years)</i>
 <i>Do not use folded or creased</i>	 <i>Do not insert pins</i>
 <i>Wash at a maximum temperature of 30 °C on a delicate cycle</i>	 <i>Do not bleach</i>
 <i>Dry in a tumble dryer on a delicate cycle at a low temperature</i>	 <i>Do not dry clean</i>
 <i>Do not iron</i>	

# IMPORTANT INSTRUCTIONS. RETAIN FOR FUTURE USE.



**WARNING!** Instructions and warnings for safe use.



Before using this appliance, carefully read the instructions for use and in particular the safety notes and warnings, which must be complied with. Keep this manual together with its illustrative guide for future consultation. Should you transfer the appliance to another user, make sure you hand over this documentation as well.

**NOTE:** Should any part of this manual be difficult to understand or any doubt arise, contact the company at the address indicated on the last page before using the appliance.

**NOTE:** Persons with impaired vision may consult these instructions for use in digital format at the website [www.dreamlanduk.co.uk](http://www.dreamlanduk.co.uk)

- After unpacking, make sure the appliance is intact, complete with all its parts as shown in the illustrative guide and with no sign of damage. If in any doubt, do not use the appliance and contact an authorised service centre.



**WARNING!** Risk of suffocation.


Children shall not play with the packaging. Keep the plastic bag out of the reach of children.

- This appliance must be used only for the purpose for which it was designed, namely as an underblanket for home use to heat a bed. Any other use is considered not compliant with the intended use and therefore dangerous.
- Before connecting the appliance to the mains supply, make sure that the voltage and frequency indicated on the technical data of the appliance correspond to those of the mains supply. The rating label is on the appliance or on the power supply unit, if any (see illustrative guide and technical data).
- This appliance can work automatically at a frequency of 50 Hz or 60 Hz.
- This appliance is only to be used with the types of detachable control unit that are marked on the appliance.



Children under the age of three are not to use this appliance due to their inability to react to overheating.

EN

- This appliance can be used by children older than 3 years and younger than 8 years under supervision and with the control always set to minimum temperature.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
- The cable and control unit of the appliance can give rise to risks of entanglement, strangulation, tripping or treading if not correctly arranged. The user shall make sure that electric cords shall be arranged in a safe way.
- Always disconnect the appliance from the mains supply before cleaning or performing maintenance and when the appliance is not in use.
- Examine the appliance frequently for signs of wear or damage. If the appliance has been misused or does not work, contact an authorised technical service centre before switching it on again.
- If the supply cord is damaged, take the whole appliance to an authorised technical service centre for the replacement of the control unit, so as to prevent all risks.
- If the appliance is used on an adjustable bed, check that the blanket and cord do not become trapped or rucked, for example in hinges.
- This appliance is not intended for medical use in hospitals.
-  DO NOT use if wet.



DO NOT USE FOLDED OR CREASED.



DO NOT INSERT PINS OR NEEDLES.







- When storing the appliance, allow it to cool down before folding.



**WARNING! DO NOT crease the appliance by placing items on top of it during storage.**



**WARNING! For use, cleaning, maintenance and storage of the appliance, please follow the instructions specified in the corresponding chapters.**

-  **DO NOT** use the appliance with wet hands or damp feet.
-  **DO NOT** pull the power cable or the appliance itself to remove the plug from the socket.
-  **DO NOT** pull or lift the appliance by the supply cord.
-  **DO NOT** expose the appliance to humidity, to the effects of weather (rain, sun, etc.) or to extreme temperatures.
- If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Contact an authorised technical service centre for any repairs.
-  **DO NOT** use this appliance to warm animals.
-  **DO NOT** tuck in.
- See the external packaging for the characteristics of the appliance.

## USE

### POSITIONING THE UNDERBLANKET



**WARNING! The electric blanket must only be placed between the mattress and the flat sheet and not on top of persons in bed.**

**IMPORTANT:** The underblanket only works efficiently if it is placed on the bed and covered with a bed sheet, covers or quilt.

- Place the underblanket (5) directly onto the mattress with the connector side facing downwards at the top part of the mattress.
- Fit the underblanket to the mattress by securing the elasticated straps over each corner of the mattress. Make sure the underblanket is always spread out smoothly and that there are no creases.
- Make the bed, laying the first sheet on top of the underblanket. Place the second sheet and the normal blanket or duvet on top.

### CONNECTING THE CONTROL UNIT

- Insert the control unit connector (2) in the underblanket connector (1) to connect the control unit to the underblanket. For the dual control blanket models, repeat this for

the other side.

- Run the control unit cable along the floor next to the bed. Do not squash the control unit cable between the mattress and the bed frame.
- Insert the plug of the control unit cable in the mains socket (3). Every time the plug is inserted, the control unit automatically performs a self-diagnosis, lighting up all LEDs (10, 11) in a clockwise sequence for around two seconds.

## SWITCHING ON AND SELECTING THE RIGHT TEMPERATURE

The control unit can be set to the following temperature levels:

### 6: Fast pre-heat temperature

### 5-4: Medium pre-heat temperature

### 3-1: Continuous or all-night use

- To switch the underblanket on press the ON/OFF button (7). Every time the appliance is turned on, the Auto Safety Function automatically runs a full check of your blanket, lighting up all the LEDs (10, 11) in a clockwise sequence. Following this check, the control unit automatically sets to temperature 6 and the auto shut off timer to 1 hour.
- For fast pre-heat, use maximum temperature 6. If you like a medium pre-heat temperature, then you can select 4-5 by pressing the temperature selector button (8) until the LED for the required temperature lights up (11). The higher the number selected, the higher the temperature.

**IMPORTANT:** The temperature of the underblanket must be evaluated by lying in the bed rather than just feeling it by hand.

## CONTINUOUS OR ALL NIGHT USE



**For continuous or all night use of the appliance, set the control unit to temperature settings from 1 to 3 only.**

To set the control unit to the continuous use temperature, press the temperature selector button (8) until LEDs 1, 2 or 3 light up (11).



**DO NOT** get into bed with the control unit set to a higher temperature than recommended for continuous use.

**If the appliance is slept on with the controls set to a higher temperature the user may suffer skin burns or heat stroke.**



**WARNING! DO NOT** place the control unit under the pillow or under the sheets when in use.

## AUTO SHUT OFF TIMER

**EN** The underblanket has an automatic shut off timer of 1, 3 or 9 hours. When switched on, the control unit automatically sets itself to 1 hour on the auto shut off timer and LED 1h lights up in green (10). To set a different auto shut off timer, press the timer selector button (6) and select the desired timer. Each time the auto shut off timer is reset, the timer starts from zero. When the time has elapsed, the underblanket switches off and the standby LED (9) lights up in blue.

**ⓘ NOTE:** Should the power supply accidentally be interrupted during use, when the control unit is switched back on it will maintain the temperature and timer settings in use previously and the timer counter will start from zero.

**ⓘ NOTE:** So that the display light does not bother users during the night, the light intensity reduces around 15 seconds after any button is last pressed. Similarly, the standby LED becomes less bright 15 seconds after it is activated.

## SWITCHING OFF

Switch the underblanket off by pressing the ON/OFF button (7) and remove the plug from the socket (3).

## CLEANING AND MAINTENANCE

The underblanket is washable. Check the washing symbols on the label to ensure it is washed correctly.



**WARNING!** Always disconnect the appliance from the mains and disconnect the control connector from the underblanket before cleaning or performing maintenance.

## BEFORE WASHING

- Take the plug of the control unit cable out of the mains socket (3).
- Press the grip levers at the sides of the control unit connector (2) to remove the control unit connector from the underblanket connector (1).



## MACHINE WASHING

- The underblanket can be cleaned in the washing machine at 30°C, on a delicate cycle.
- Pre-treat any stains by spot cleaning before placing in the washing machine.
- Use only the delicate cycle for spinning. DO NOT make an additional spinning cycle.



## DRYING IN THE TUMBLE DRYER

- The underblanket can be dried in a tumble dryer on a delicate cycle, but at the end of



the drying cycle it must be air-dried to allow it to dry completely.


- Remove the underblanket from the tumble dryer at the end of the drying cycle and reshape it to its original size.
- Allow the underblanket to fully air-dry before using it again.

### **DRYING IN THE OPEN AIR**

- When the underblanket is spread out to dry on a clothes airer, it must be stretched so the original size is more or less maintained. This is best done while the underblanket is still damp, working alternately on the opposite corners and pulling one side at a time. You might have to repeat this procedure several times until the underblanket is completely dry.



**WARNING! Spread out the appliance without using clothes pegs to avoid damaging it, and leave it to fully dry spread out on a drying rack that is not exposed to the sun.**

- Only use the underblanket when it's thoroughly dry.
-  Do not iron the underblanket.



**WARNING! Examine the appliance against the light to make sure the cables are not bent or twisted.**



**WARNING! Dry the appliance flat without using pegs to avoid damaging it. Leave it to dry, laid out flat on a clothes airer, not in direct sunlight.**

### **STORING THE UNDERBLANKET**

**When not in use, store as follows:**

- If the underblanket has been washed, wait until it's completely dry;
- Fold it like a normal blanket;
- You are advised to store the underblanket in the original packaging it was supplied in;
- When storing the appliance, allow it to cool down before folding;
- Put the underblanket away in a dry place

The fabric may turn yellow over time. This does not have any effect at all on the safety and/or effectiveness of the product itself.

**Examine the appliance and its supply cord frequently for signs of wear or damage. If there are such signs or in the case of malfunction, contact an authorised technical service centre.**

## TROUBLESHOOTING

This chapter describes the most common problems that can arise using the appliance. If the problems cannot be solved with the information below, please contact the Authorised Service Centre.

Problem	Solution
The LEDs on the control unit do not light up.	Check that the control unit plug is fully inserted in the socket (3). If the LEDs remain off, remove the control unit plug from the socket (3) and return the underblanket to an authorised technical service centre.
The blue warning light is flashing.	Turn the control unit off and remove the plug from the socket (3). Check that the control unit connector (2) is fully inserted in the underblanket connector (1) and reinsert the plug in the socket (3). If the standby LED continues to flash, return the underblanket to an authorised technical service centre.
Temperature LED 1 (11) is flashing.	Return the underblanket to an authorised technical service centre to be checked.
The product has been used incorrectly or is damaged.	
The power cable or another internal wire is damaged.	
The control unit is damaged.	
There are holes or tears in the fabric or stubborn creases that do not spread out.	

## DISPOSAL



The packaging of the appliance is made of recyclable materials. Dispose of the packaging in accordance with the environmental protection regulations.



Pursuant to Waste Electrical and Electronic Equipment (WEEE) Regulations (2013) (for EU: Directive 2012/19/EU), the crossed bin symbol on the appliance or its packaging indicates that the appliance must be disposed of separately from other waste at the end of its useful life.

The user must therefore take the appliance to an appropriate recycling centre for electrical and electronic equipment. Alternatively, instead of handling the disposal, the user can hand over the appliance to the retailer when a new, equivalent one is purchased. The user can hand over electronic products measuring less than 25 cm to retailers of electronic products having a sales area of at least 400 m<sup>2</sup> free of charge and with no obligation to buy. Proper waste sorting prior to sending the equipment no longer used for recycling, processing and disposal in a manner that respects the environment contributes towards avoiding negative impacts on the environment and on health and promotes the reuse and/or recycling of the equipment's material.

## GUARANTEE

This product is guaranteed for a period of 3 years from the date of purchase against material, mechanical and electrical defects. The guarantee is binding if it is accompanied by a valid receipt of payment. This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions provided that is not connected to an unsuitable electricity supply, dismantled, interfered with in any way damaged, through misuse, fair wear and tear. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

PLEASE NOTE, THE COST OF A SAFETY INSPECTION IS NOT COVERED BY THIS GUARANTEE. A CHARGE WILL BE MADE IN RESPECT OF ANY PRODUCT RETURNED UNDER THIS GUARANTEE, WHERE NO FAULT IS FOUND.

This guarantee is offered as an extra benefit and does not affect your statutory rights as a consumer. This guarantee does not confer any rights other than those expressly set out above and in particular we shall not be liable for any indirect or consequential loss or damage. Nothing in this guarantee or the instructions relating to the product excludes, restricts or otherwise affects your statutory rights. In line with our policy of continuous development, we reserve the right to change this product, packaging and documentation without notice. If a defect appears and after checking that the blanket is being used properly in accordance with the instructions, return it with a valid proof of purchase, as soon as possible to the manufacturer's Service Centre. This guarantee is valid in the UK only.

 
## SERVICE CENTRE

Imetec UK, AP Taylor, Unit 5, Arenson Centre, Arenson Way, Houghton Regis, Dunstable LU5 5UL

Tel: **0333 0050305**

E-mail: [customerservice@imetec.co.uk](mailto:customerservice@imetec.co.uk)

[www.dreamlanduk.co.uk](http://www.dreamlanduk.co.uk)



DREAMLAND

MI004367  
240124

Address for GB IMETEC UK Ltd c/o KJG 100 Barbirolli Square, Manchester, M2 3BD, UK.  
Address for Ireland/NI Tenacta Group S.p.A. Via Piemonte 5/11 24052 Azzano S. P. (BG) ITALY.